


**Basic Non interlock wiring**

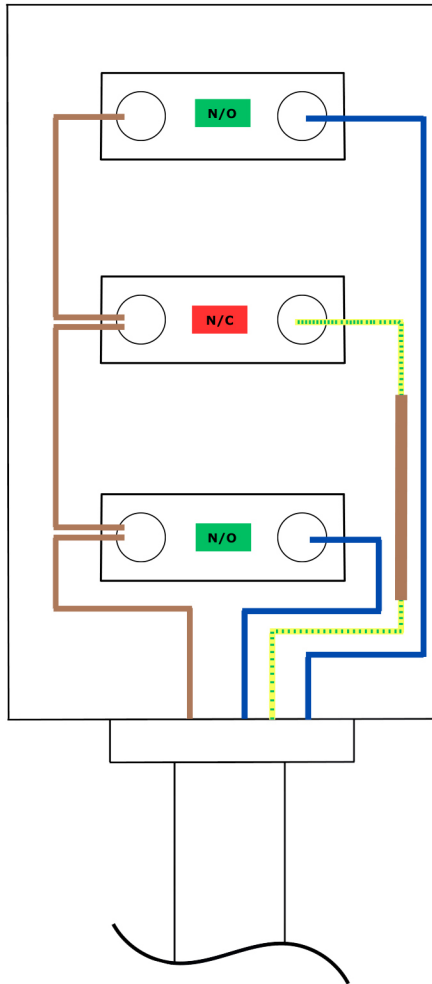

## Basic Push Button Wiring

All push button stations are provided unwired.

Provision of interlock wiring for some control is recommended as per the guidance diagrams below is the responsibility of the installer and damage to the motor or controls due to incorrect wiring will invalidate warranty.


**Colours shown are for reference only and many vary according to cables available.**



**WARNING** - Read these instructions fully before use.  
Installation should only be carried out by a **COMPETENT** Installer.


## Push Button Control

with Electrical safety interlock

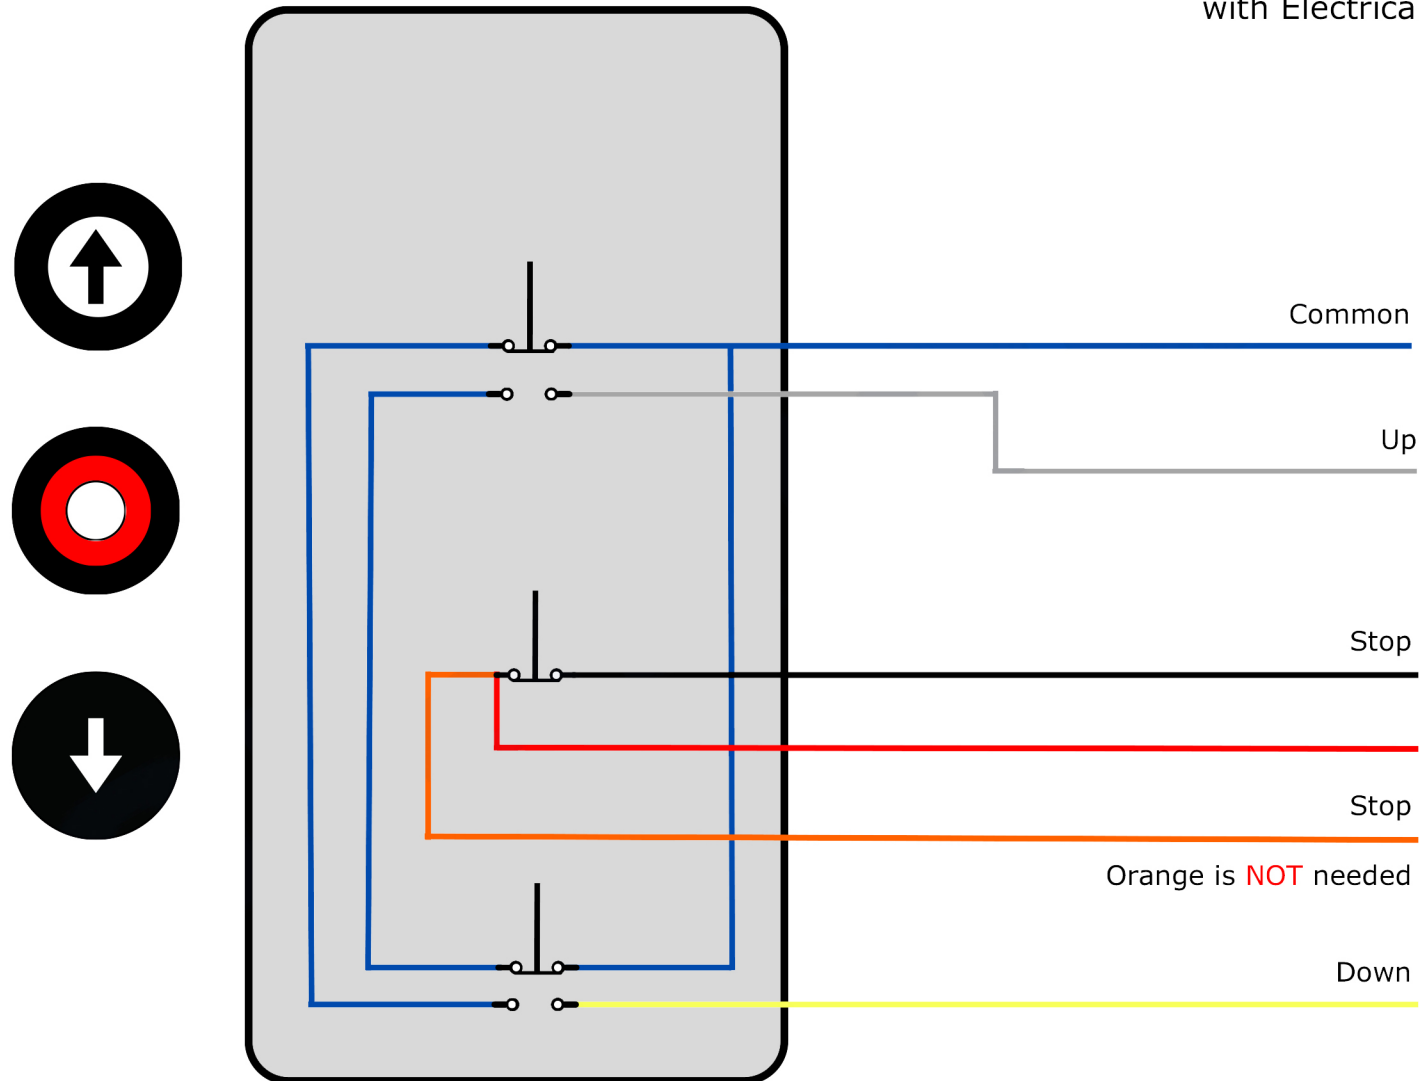



## Ultimate Push Button

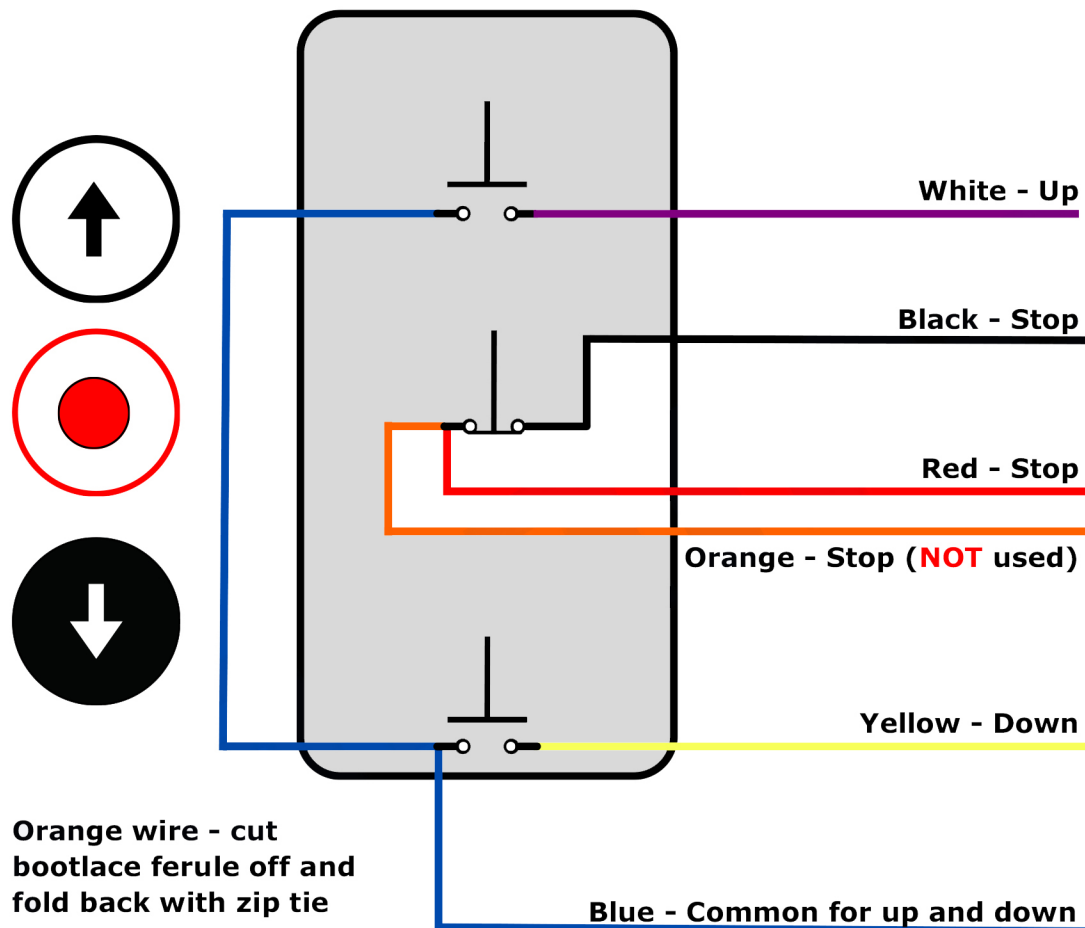

### Controllers

| Ultimate<br>Terminals | Themis<br>Terminals |
|-----------------------|---------------------|
|-----------------------|---------------------|

|   |   |
|---|---|
| 1 | 4 |
|---|---|

|   |   |
|---|---|
| 4 | 8 |
|---|---|

|   |   |
|---|---|
| 6 | 9 |
|---|---|

|   |  |
|---|--|
| 5 |  |
|---|--|

|   |   |
|---|---|
| 3 | 6 |
|---|---|

|   |   |
|---|---|
| 2 | 5 |
|---|---|